Thank you for purchasing this quality product. Be sure to check all packaging material carefully for small parts, which may have loose inside the carton during shipment. Once uppacked, compare all parts and hardware to the provided list to be sure all parts are present. If any parts or hardware are missing or damaged, please phone, e-mail or fax our Custormer service Department. For speady service, please provide your order number, item number and part number/letter of the part needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A 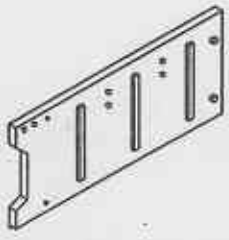 LEFT SIDE PANEL-1PC	B 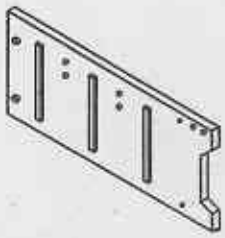 RIGHT SIDE PANEL-1PC	C BOTTOM PANEL-1PC
D 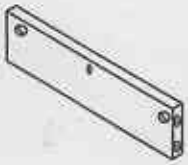 ACROSS PANEL-2PCS	E 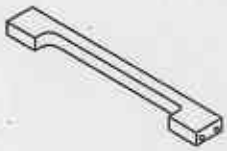 LOW PANEL-1PC	F 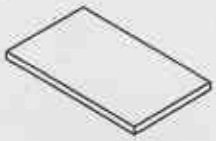 TOP PANEL-1PC
G  BACK PANEL-1PC	H DRAWER PANEL FRONT-3PCS	I  DRAWER SIDE PANEL-6PCS
J DRAWER PANEL BACK-3PCS	K DRAWER PANEL BOTTOM-3PCS	L  CAM-BOLTS-12PCS

M CAM-LOCKS-12PCS	N METAL KNOB 2-3PCS	O METAL KNOB 1-6PCS
P SCREWS-6PCS	Q DOWELS-11PCS	R SCREWS-14PCS
S SCREWS-24PCS	T CAM-TOOL-1PC	

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT.IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY,PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

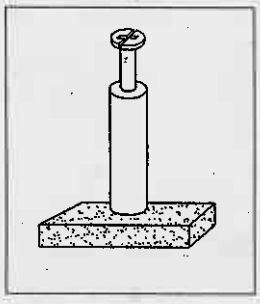

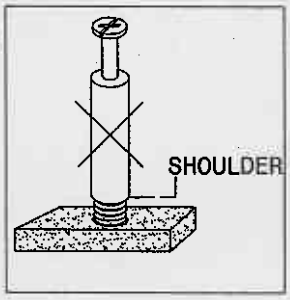

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

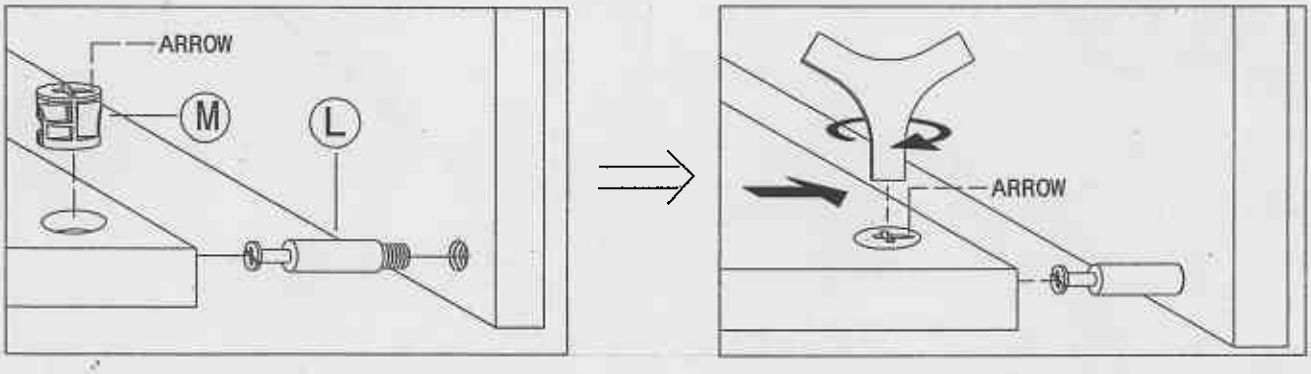

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

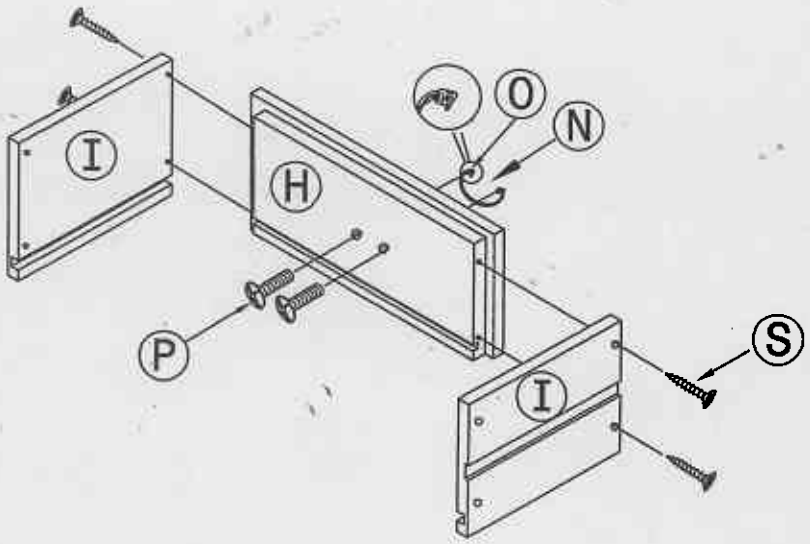

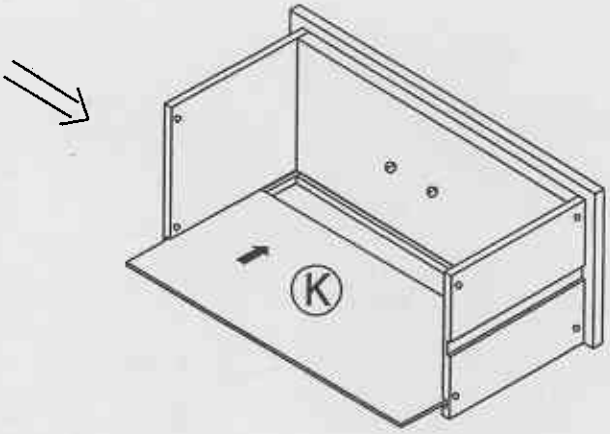

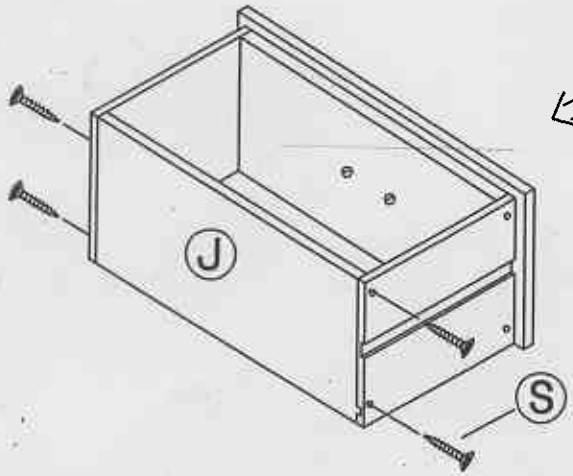

1). ASSEMBLE THE DRAWER.

- ATTACH DRAWER PANEL SIDE(I)USING SCREWS(S)AND ATTACH KNOB(O)USING SCREWS(P).
- INSERT THE DRAWER PANEL BOTTOM(K)INTO SLOTS IN DRAWER PANEL SIDE(I).

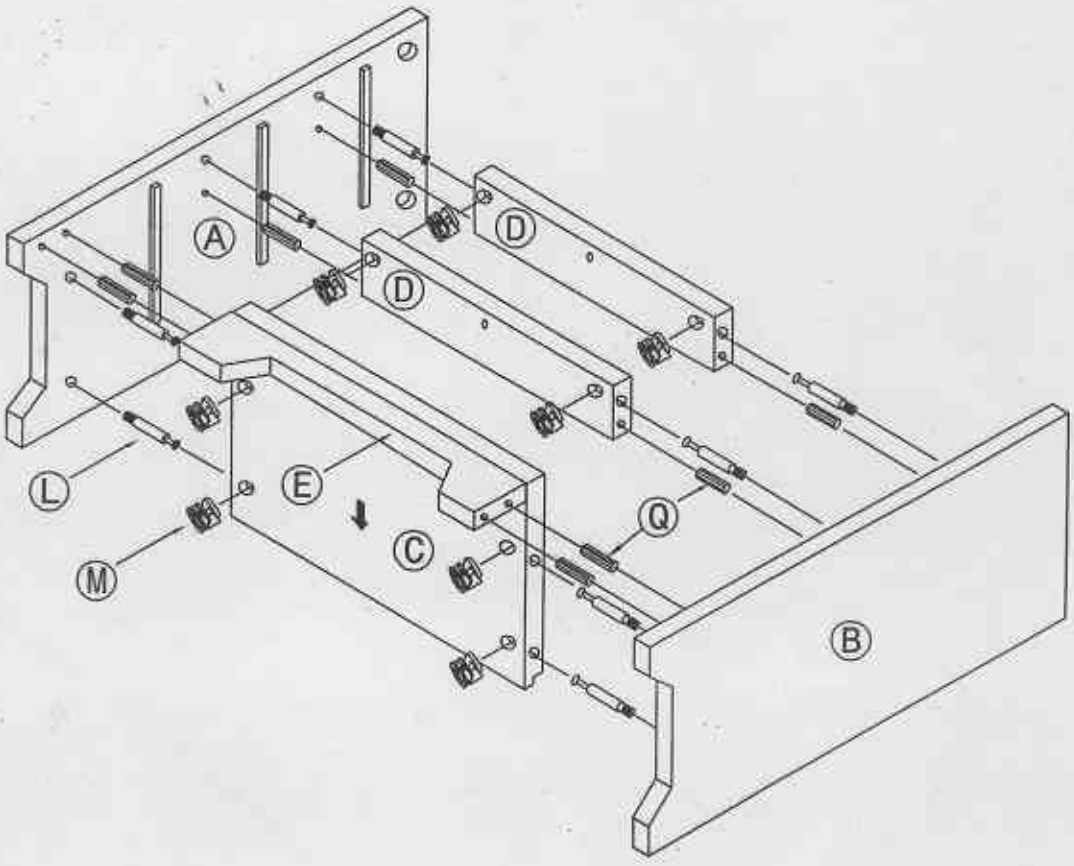

2).ASSEMBLE SIDE PANEL(A/B).

- INSERT 8 DOWELS(Q)IN DESIGNATED HOLES ON ACROSS PANEL(D)AND LOW PANEL(E).
- ROTATE 8 CAM-BOLTS(L)INTO HOLES IN SIDE PANEL(A/B).
- PLACE THE CAM-BOLTS(L)INTO HOLES IN PANEL(D/C)AND ATTACH USING CAM-LOCKS(M).

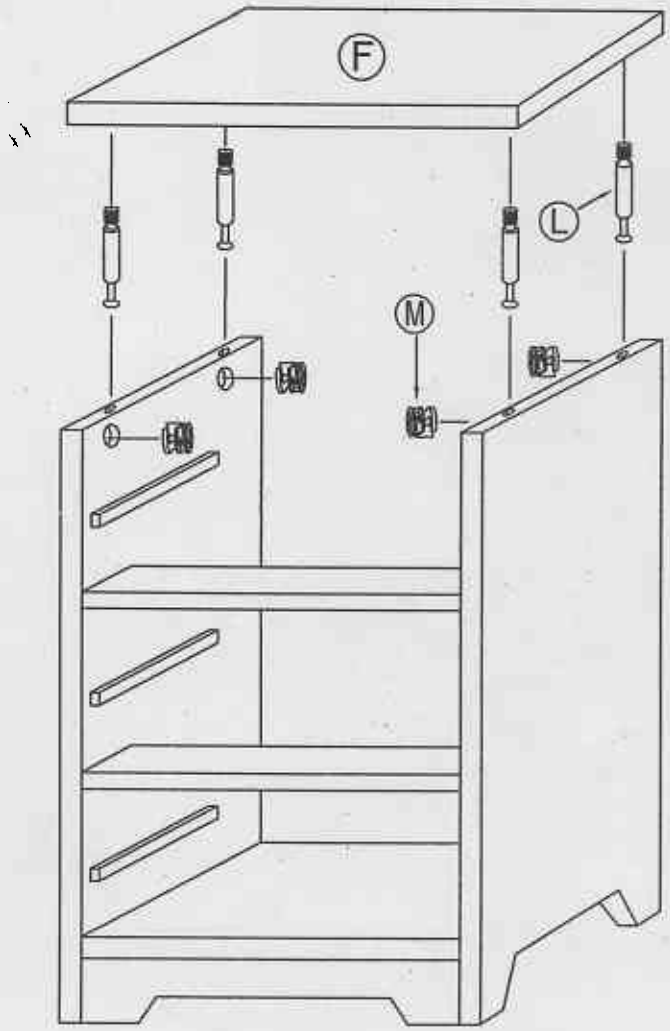

3). ASSEMBLE TOP PANEL(F).

- ROTATE THE 4 CAM-BOLTS(L)INTO HOLES IN TOP PANEL(F).
- PLACE THE CAM-BOLTS(L)INTO HOLES IN PANEL(A/B)AND ATTACH USING CAM-LOCKS(M).

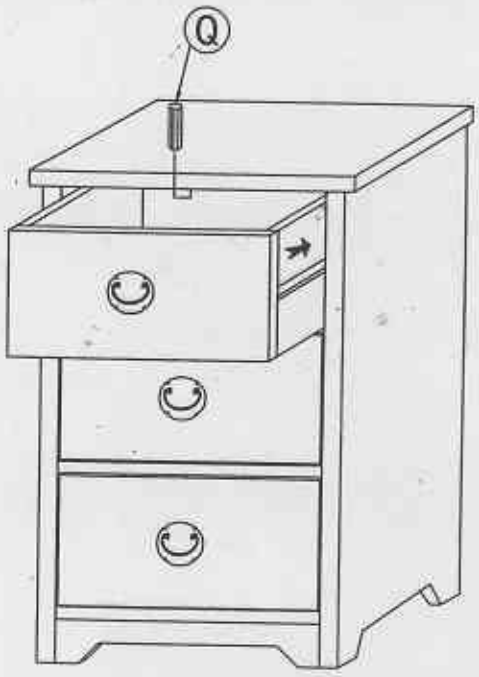

4).INSERT DRAWERS.

- INSERT THE DOWELS(Q)INTO HOLES IN PANEL(F/D)AND SLIDE THE DRAWER INTO THE SLIDERS.

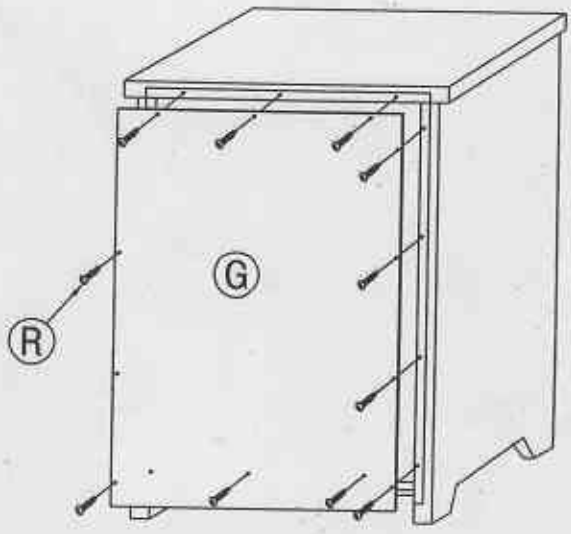

5).ASSEMBLE THE BACK PANEL(G).

- ATTACH THE BACK PANEL(G)TO PANEL(F/A/B/C)USING SCREWS(R).